

CO2 Ammo Air

Operation with a smartphone

1. Connect the hoses to the tires




2. Connect cigarette adaptor to activate CO2 Ammo air
3. Activate the Made For Rocks app.
4. Link to the controller

Press to search the controller

Select MadeForRocks


Button showing link and windows populate with default data

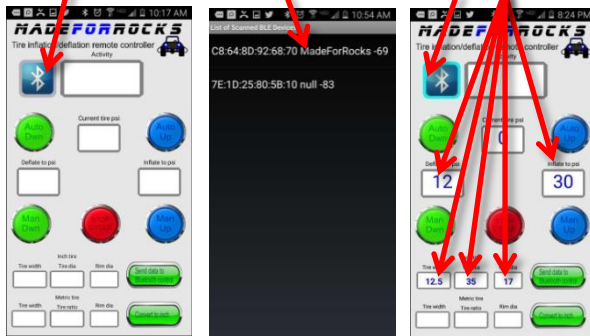


If the windows do not all populate with data stop the app, turn the rocker switch to off and repeat steps 3, 4 & 5.

Set your tire size, inflation & deflation defaults

(This only needs to be done once)

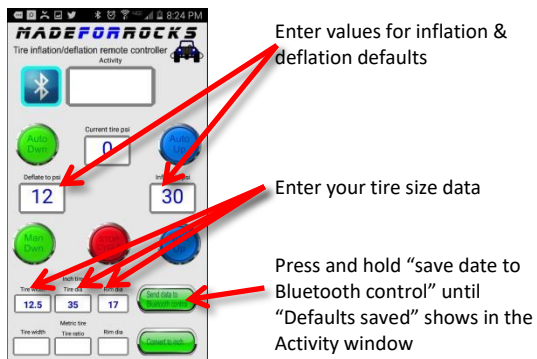

Converting Metric tire sizes

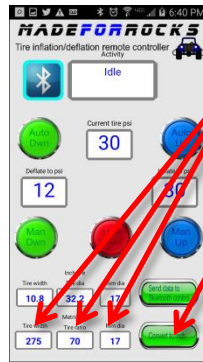

Enter metric tire size into these windows.

Press "convert to inch" to populate the inch size windows


Auto Deflate



Confirm the desired deflation pressure is displayed in the "Deflate to psi" window.

If not, enter the desired pressure.

Press "Auto Down" for a few seconds.

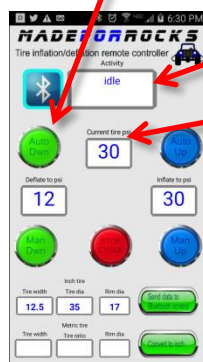

Status of the process will be displayed in the activity window.

Pressure will be updated during deflation and one stop is made before the cycle is complete.




Auto Inflate (Run engine to save the battery)



Confirm the desired inflation pressure is displayed in the "Inflate to psi" window.

If not, enter the desired pressure.

Press the "Auto Up" button for a few seconds.

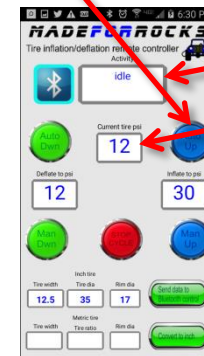

Status of the process will be displayed in the activity window.


Pressure will be updated during inflation and one stop is made before the cycle is complete.



Manual Inflate and Deflate

Press and hold for manual operation

Note: Tire pressure displayed may not be accurate

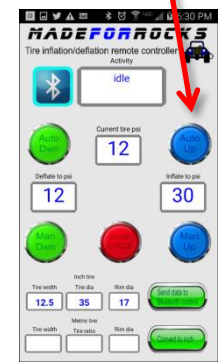

CO2 Ammo Air

Operation with controller only

1. Connect the hoses to the tires
2. Push toggle switch down to activate Ammo air



3. Defaults for Tire size, inflation and deflation values will display for a few seconds

Note: If tires are a different size than displayed airing down will not be accurate (see smartphone operation for how to set these defaults).

Auto Deflate

Press the Auto Deflate button.



Note: Auto deflate will deflate the tires to the default pressure

Man Deflate


Hold the Man Deflate button to manually release air from the tires.



Note: Pressure display is not accurate during manual deflation.

Auto Inflate


Press the Auto Inflate button.

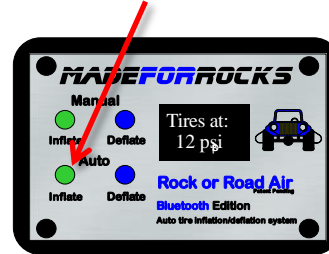

Note: Auto inflate will inflate the tires to the default pressure

Man Inflate

Hold the Man Inflate button to manually inflate the tires.

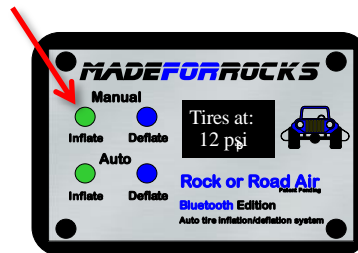

Note: Pressure display is not accurate during manual inflation.